

## 型号表示方法

[标准型] VHK **2** — **02S** — **02S** **R** **L**

[难燃型] VHK **2** **R** — **04F** — **04F** **R** **L** **C**

### 规格

阀种类	2通,3通
使用流体	空气
最高使用压力	1.0 MPa
*真空使用压力	-100kPa {10 Torr}
环境及流体温度	0 ~ 60℃
适合管子	尼龙、软尼龙、PU软管
配件(任选)	托架

\*限2通阀 (VHK2系列)

品种	2通阀	3通阀
2	2通阀	
3		3通阀


1(P)口 接管口径	2(A)口 接管口径
<b>04F</b>	ø4
<b>06F</b>	ø6
<b>08F</b>	ø8
<b>10F</b>	ø10
<b>12F</b>	ø12
<b>M5</b>	M5 × 0.8
<b>01S</b>	R 1/8
<b>02S</b>	R 1/4
<b>03S</b>	R 3/8
<b>04S</b>	R 1/2

难燃罩	无
<b>C</b>	有(仅快换接头)

托架	无
<b>L</b>	L形托架


旋钮颜色	无记号	2通阀	灰色
(标准)	3通阀	蓝色	
<b>R</b>	2通阀	红色	
(可选项)	3通阀		

## 接管种类

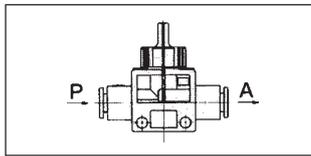


P: 快换接头 A: 快换接头

		A 适合管子外径 (mm)				
		ø4	ø6	ø8	ø10	ø12
P 适合管子外径 (mm)	ø4	●				
	ø6	●	●			
	ø8		●	●		
	ø10			●	●	
	ø12				●	●

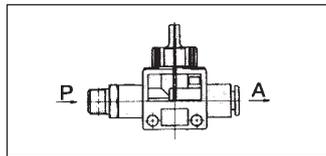


P: 外螺纹 A: 快换接头

		A 适合管子外径 (mm)				
		ø4	ø6	ø8	ø10	ø12
P 螺纹口径 R	M5	●	●			
	1/8	●	●	●		
	1/4		●	●	●	●
	3/8		●	●	●	●
	1/2				●	●

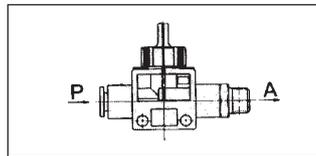


P: 快换接头 A: 外螺纹

		A 螺纹口径R				
		M5	1/8	1/4	3/8	1/2
P 适合管子外径 (mm)	ø4	●	●			
	ø6	●	●	●	●	
	ø8		●	●	●	●
	ø10			●	●	●
	ø12				●	●

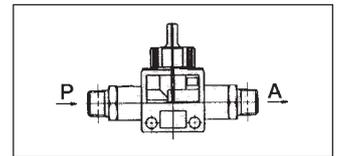


P: 外螺纹 A: 外螺纹

		A 螺纹口径R				
		M5	1/8	1/4	3/8	1/2
P 螺纹口径 R	M5	●				
	1/8	●	●			
	1/4		●	●		
	3/8			●	●	
	1/2				●	●

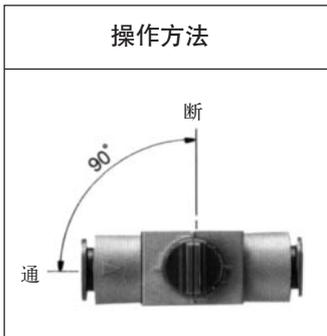

## 外形尺寸图 (毫米)

P及A:快换接头

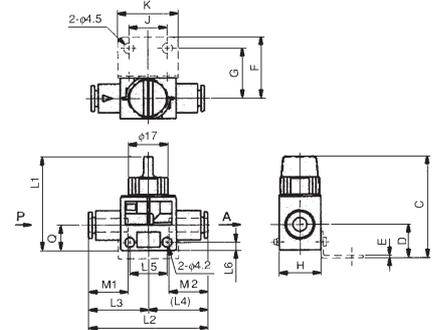

注1) 型号	适合管子外径(mm)		H	L1	L2	L3	L4	L5	L6	M1	M2	Q	有效截面积(mm²)		托架安装尺寸							
	P	A											P→A	※A→R	托架型号	C	D	E	F	G	J	K
VHK□-04F-04F	4	4	18	41	47.6	23.8	23.8	16.5	3.5	15.8	15.8	11	3.4	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-06F-04F	6	4	18	41	48	24.3	23.7	16.5	3.5	16.8	15.8	11	5.1	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-06F-06F		6			48.6		24.3				16.8		7.2									
VHK□-08F-06F	8	6	18	41	50.5	26.2	24.3	16.5	3.5	18.7	16.8	11	9	1.2	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-08F-08F		8			52.4		26.2				18.7		9.7									
VHK□-10F-08F	10	8	22	46	58.5	30.5	28	21.5	4	20.8	18.7	14	13.7	3.2	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-10F-10F		10			61		30.5				20.8		16.1									
VHK□-12F-10F	12	10	22	46	62	31.5	30.5	21.5	4	21.8	20.8	14	17	3.2	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-12F-12F		12			63		31.5				21.8		17.5									


注1) □—代表阀种类  
2=2通阀  
3=3通阀

※只限3通阀


## 2通/3通手动阀: VHK系列

### 外形尺寸图 (毫米)


P: 外螺纹, A: 快换接头

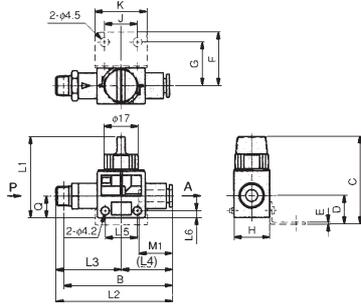

P: 快换接头, A: 外螺纹

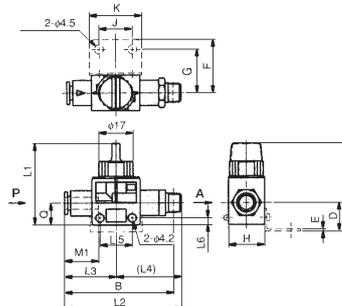

P及A: 外螺纹

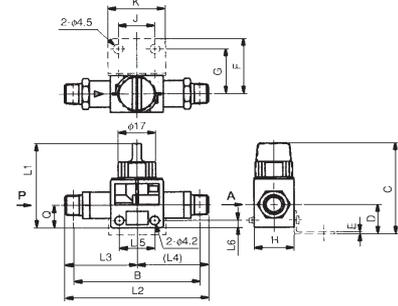

P: 外螺纹, A: 快速接头

注1) 型号	外螺纹		H	L1	L2	L3	L4	L5	L6	M1	Q	有效截面积(mm <sup>2</sup> )		*B	托架安装尺寸									
	P	A										P→A	※A→R		托架型号	C	D	E	F	G	J	K		
VHK□-M5-04F	M5	4	18	41	52.9	23.8	29.1	16.5	3.5	15.8	11	2.0	1.2	49	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-M5-06F		6			53.9	24.3	29.6																16.8	50
VHK□-01S-04F	1/8	4	18	41	55.4	23.8	31.6	16.5	3.5	15.8	11	3.4	1.2	51	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-01S-06F		6			56.9	24.3	32.6																16.8	53
VHK□-01S-08F		8			62.2	26.2	36																18.7	58
VHK□-02S-06F	1/4	6	18	41	60.4	24.3	36.1	16.5	3.5	16.8	11	7.2	1.2	54	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-02S-08F		8			65.2	26.2	39																18.7	59
VHK□-02S-10F		10			73.8	30.5	43.3																20.8	68
VHK□-02S-12F		12			76.3	31.5	44.8																21.5	70
VHK□-03S-06F	3/8	6	18	41	62.4	24.3	38.1	16.5	3.5	16.8	11	7.2	1.2	56	VHK-B1A	44.5	14.5	1	27	22	16.5	26		
VHK□-03S-08F		8			66.2	26.2	40																18.7	60
VHK□-03S-10F		10			74.8	30.5	44.3																20.8	68
VHK□-03S-12F		12			77.3	31.5	45.8																21.5	71
VHK□-04S-10F	1/2	10	22	46	78.2	30.5	47.7	21.5	4	20.8	14	16.1	3.2	70	VHK-B2A	49	17	1	30	25	21.5	31		
VHK□-04S-12F		12			80.2	31.5	48.7																21.8	72

注1) □ - 代表阀种类  
2 = 2通阀  
3 = 3通阀

※只限3通阀 \*安装螺纹后的参考尺寸。

P: 快换接头, A: 外螺纹

注1) 型号	管子外径		H	L1	L2	L3	L4	L5	L6	M1	Q	有效截面积(mm <sup>2</sup> )		*B	托架安装尺寸										
	P	A										P→A	※A→R		托架型号	C	D	E	F	G	J	K			
VHK□-04F-M5	4	M5	18	41	52.9	23.8	29.1	16.5	3.5	15.8	11	2.0	1.2	49	VHK-B1A	44.5	14.5	1	27	22	16.5	26			
VHK□-04F-01S		1/8			55.4		31.6																31.6	16.8	51
VHK□-06F-M5	6	M5	18	41	53.9	24.3	29.6	16.5	3.5	16.8	11	2.0	1.2	50	VHK-B1A	44.5	14.5	1	27	22	16.5	26			
VHK□-06F-01S		1/8			56.9		32.6																32.6	16.8	53
VHK□-06F-02S		1/4			60.4		36.1																36.1	18.7	54
VHK□-06F-03S		3/8			62.4		38.1																38.1	18.7	56
VHK□-08F-01S	8	1/8	18	41	62.2	26.2	36	16.5	3.5	18.7	11	9.7	1.2	58	VHK-B1A	44.5	14.5	1	27	22	16.5	26			
VHK□-08F-02S		1/4			65.2		39																39	18.7	59
VHK□-08F-03S		3/8			66.2		40																40	18.7	60
VHK□-10F-02S	10	1/4	22	46	73.8	30.5	43.3	21.5	4	20.8	14	16.1	3.2	68	VHK-B2A	49	17	1	30	25	21.5	31			
VHK□-10F-03S		3/8			74.8		44.3																44.3	20.8	70
VHK□-10F-04S		1/2			78.2		47.7																47.7	21.5	71
VHK□-12F-02S	12	1/4	22	46	76.3	31.5	44.8	21.5	4	21.8	14	17.5	3.2	70	VHK-B2A	49	17	1	30	25	21.5	31			
VHK□-12F-03S		3/8			77.3		45.8																45.8	21.8	71
VHK□-12F-04S		1/2			80.2		48.7																48.7	21.8	72

※只限3通阀 \*安装螺纹后的参考尺寸。

P: 外螺纹, A: 外螺纹

注1) 型号	外螺纹		H	L1	L2	L3	L4	L5	L6	Q	有效截面积(mm <sup>2</sup> )		*B	托架安装尺寸							
	P	A									P→A	※A→R		托架型号	C	D	E	F	G	J	K
VHK□-M5-M5	M5	M5	18	41	58.2	29.1	29.1	16.5	3.5	11	2.0	1.2	51	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-01S-M5	1/8	M5	18	41	61.6	32.6	29	16.5	3.5	11	2.0	1.2	54	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-01S-01S		1/8			65.2		32.6														
VHK□-02S-01S	1/4	1/8	18	41	71.6	39	32.6	16.5	3.5	11	9.0	1.2	62	VHK-B1A	44.5	14.5	1	27	22	16.5	26
VHK□-02S-02S		1/4			78		39														
VHK□-03S-02S	3/8	1/4	22	46	85.1	44.3	40.8	21.5	4	14	13.7	3.2	73	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-03S-03S		3/8			88.6		44.3														
VHK□-04S-03S	1/2	3/8	22	46	93	48.7	44.3	21.5	4	14	15.1	3.2	79	VHK-B2A	49	17	1	30	25	21.5	31
VHK□-04S-04S		1/2			97.4		48.7														

※只限3通阀 \*安装螺纹后的参考尺寸。